



LA CLOCHE EN ROTIN

MEASUREMENTS

35cm diameter / 35cm height
50cm diameter / 50cm height

MATERIALS

Rattan

CORD

120cm / 150cm (adjustable)

WATTAGE

8w

LUMENS

500

POWER USAGE

220V

LED LIFESPAN

120,000 hours

DIMMABLE

Not dimmable

LIGHT SOURCE

E27, Included (replaceable)

WEIGHT

1KG / 3KG

LIGHT COLOR TEMPERATURE

3000K

IMPORTANT SAFETY INFORMATION:

1. Turn off power at the circuit breaker or fuse box before installation.
2. For safety and compliance with electrical codes, we recommend using a qualified electrician or experienced installer.
3. Handle the fixture carefully during installation to avoid damage.

INSTALLATION

- Turn off power at the main breaker.
- Attach the ceiling plate using the provided screws, ensuring it is level and can support the fixture's weight (1 kg / 3 kg).
- Connect fixture wires to ceiling wires: black (live) to black, white (neutral) to white, and green/yellow to ground. Tighten connections with wire connectors.
- Fasten La Cloche en Rotin securely to the ceiling plate.
- Adjust the cord length (available in 120 cm or 150 cm) to your preference and secure it tightly.
- Insert the included E27 LED light (replaceable).
- Turn power back on and test the light.

ADDITIONAL TIPS

- **Dust Regularly:** Use a soft, dry cloth to gently clean the fixture and avoid harsh cleaners to protect its natural rattan finish.
- **Check Measurements Before Installation:** Ensure the size you choose fits your space – available options are 35 cm diameter / 35 cm height and 50 cm diameter / 50 cm height.

NOTE

If you have any additional questions or requests, feel free to contact us via our contact page. You can easily place orders for our items via our website.