



# LE CHARME DU CARTON

## MEASUREMENTS

20cm diameter / 18cm height

30cm diameter / 40cm height

40cm diameter / 28cm height

## MATERIALS

Wood

## CORD

150cm (adjustable)

## WATTAGE

8w

## LUMENS

450

## POWER USAGE

110V-240V

## LED LIFESPAN

50,000 hours

## DIMMABLE

Not dimmable

## LIGHT SOURCE

E27, Included (replaceable)

## WEIGHT

1KG / 1.2KG/ 1.5KG

## LIGHT COLOR TEMPERATURE

3000K

## IMPORTANT SAFETY INFORMATION:

1. Turn off power at the circuit breaker or fuse box before installation.
2. For safety and compliance with electrical codes, we recommend using a qualified electrician or experienced installer.
3. Handle the fixture carefully during installation to avoid damage.

## INSTALLATION

- Turn off power at the main breaker.
- Attach the ceiling plate using the provided screws, ensuring it is level and can support the fixture's weight (1 kg / 1.2 kg / 1.5 kg).
- Connect fixture wires to ceiling wires: black (live) to black, white (neutral) to white, and green/yellow to ground. Tighten connections with wire connectors.
- Fasten Le Charme du Carton securely to the ceiling plate.
- Adjust the cord length (up to 150 cm) to your preference and secure it tightly.
- Insert the included E27 LED light (replaceable).
- Turn power back on and test the light.

## ADDITIONAL TIPS

- **Dust Regularly:** Use a soft, dry cloth to gently dust the fixture and avoid harsh cleaners to protect its finish.
- **Check Measurements Before Installation:** Ensure the size you choose fits your space – available options are 20 cm diameter / 18 cm height, 30 cm diameter / 40 cm height, and 40 cm diameter / 28 cm height.

## NOTE

If you have any additional questions or requests, feel free to contact us via our contact page. You can easily place orders for our items via our website.